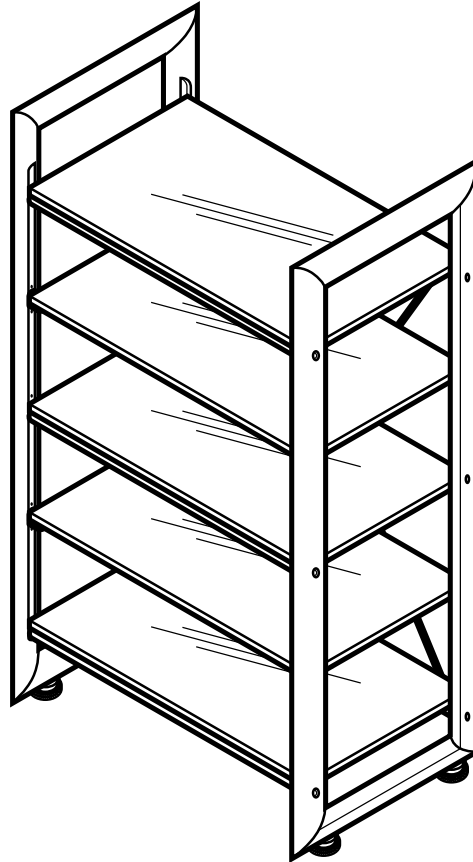


THANK YOU FOR PURCHASING OUR STUDIO RTA

OFFICE TECH BOOKCASE



MODEL #60644

IF YOU REQUIRE ANY ASSISTANCE WITH ASSEMBLY, PARTS,
OR INFORMATION ON OTHER PRODUCTS, PLEASE VISIT OUR WEBSITE:

www.studiorta.com

OR CALL OR WRITE THE FOLLOWING:

Studio
READY TO ASSEMBLE®
INSPIRING CREATIVITY

8700 REX ROAD • PICO RIVERA, CA 90660

(562) 446-2255 • FAX (562) 446-2277

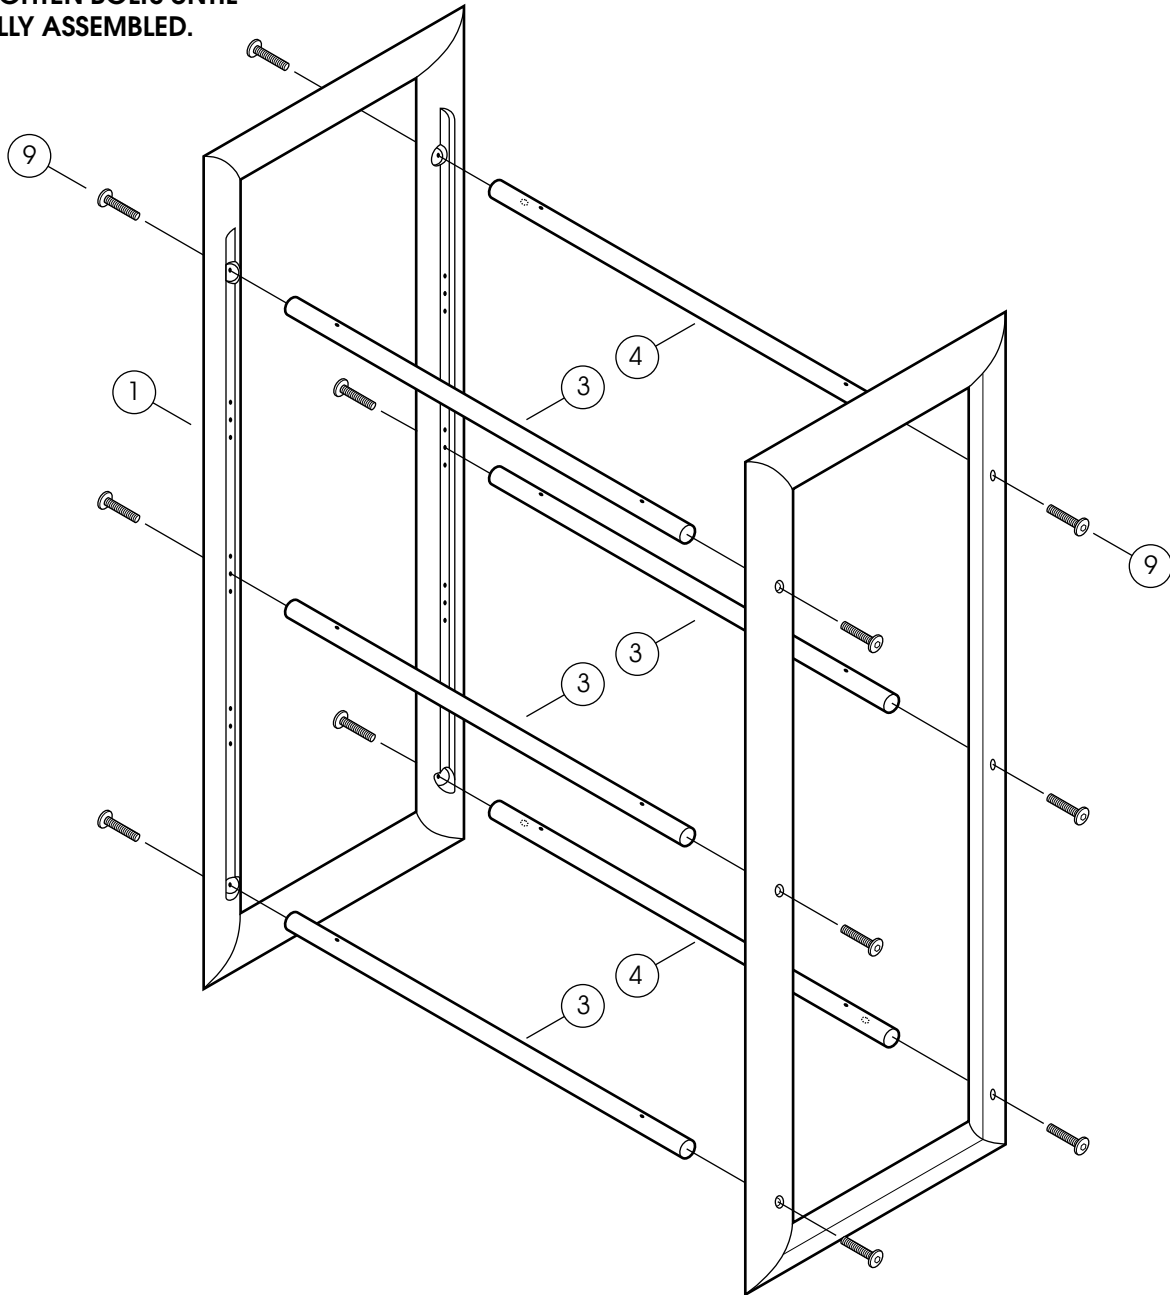
(800) 445-1527

ASSEMBLY INSTRUCTIONS

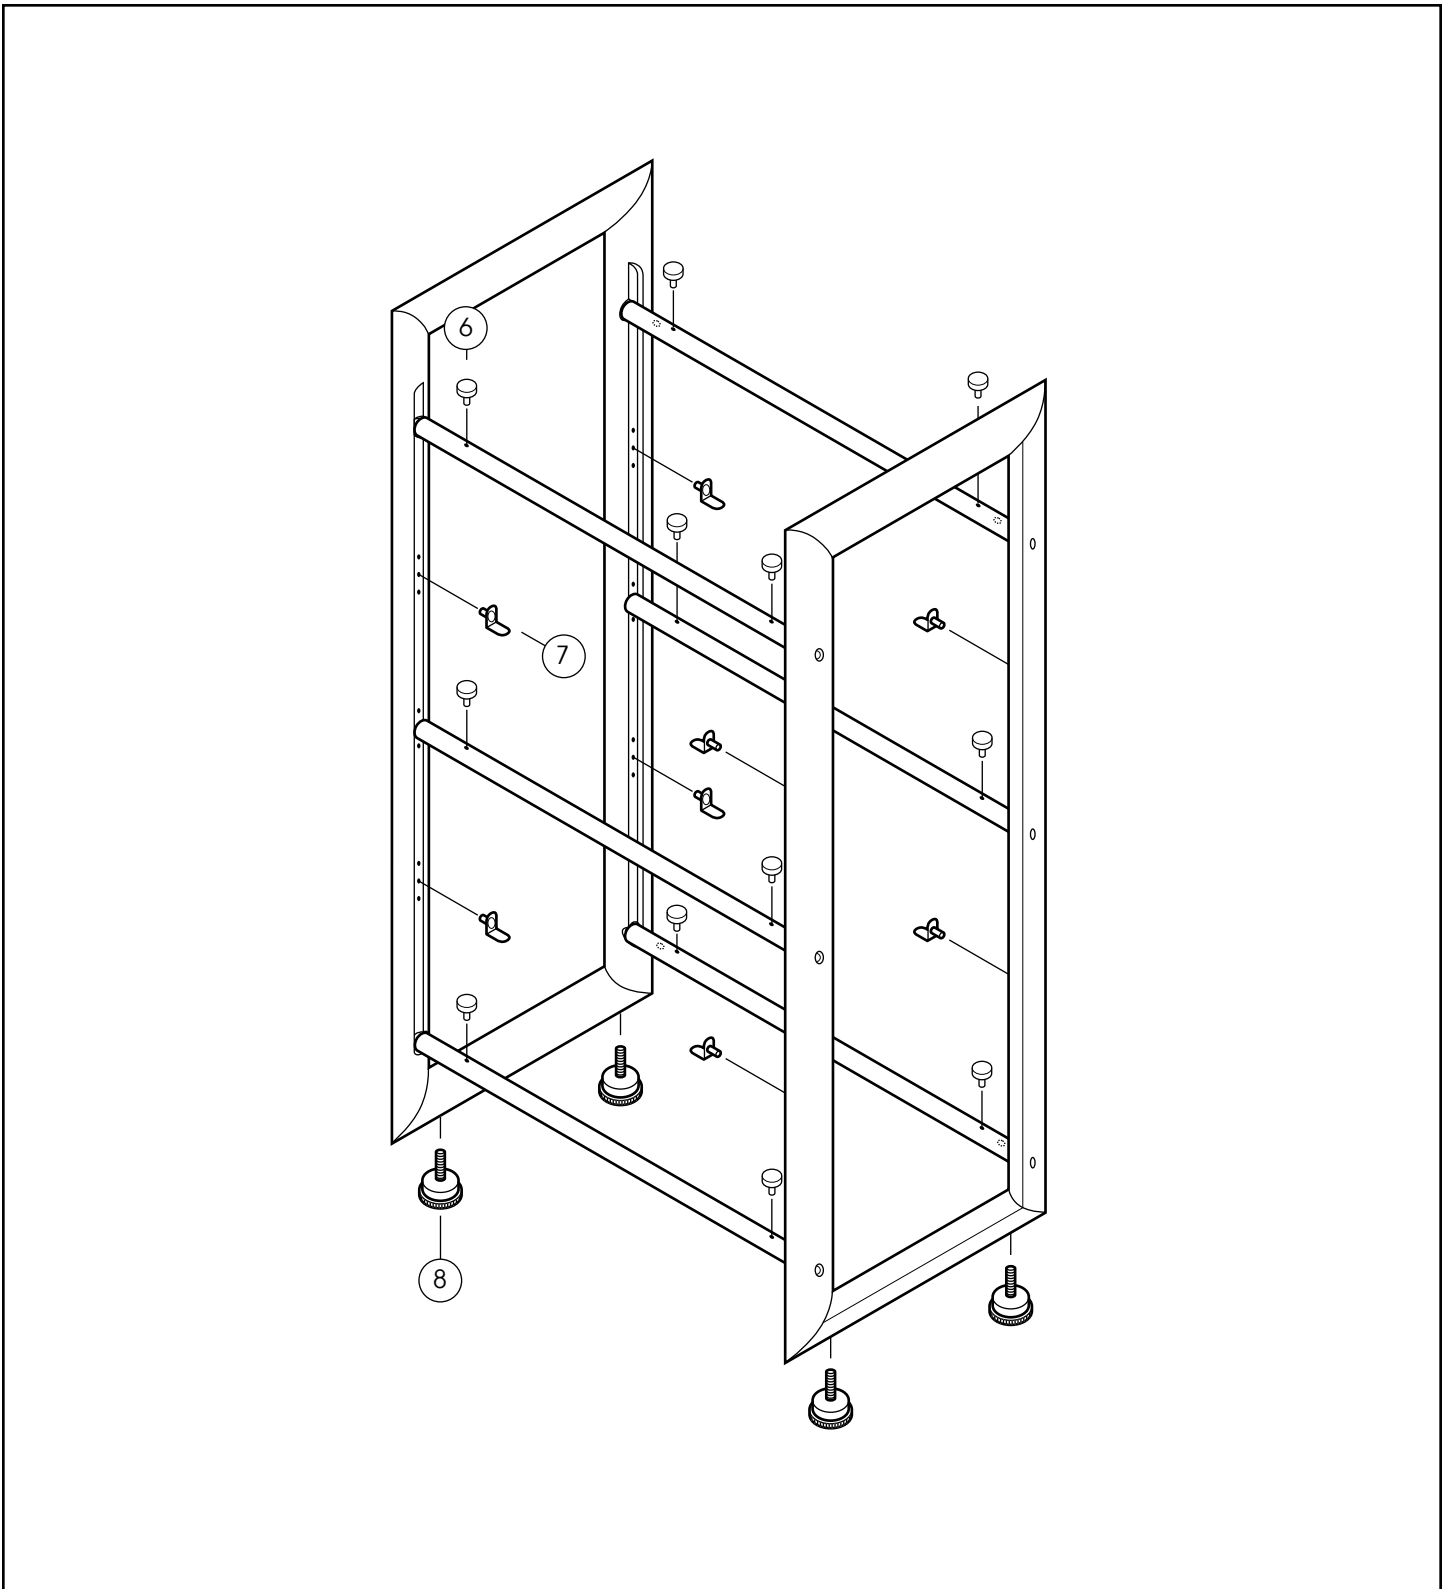
IMPORTANT:

CAREFULLY UNPACK & IDENTIFY EACH COMPONENT BEFORE ATTEMPTING TO ASSEMBLE. REFER TO PARTS LIST. PLEASE TAKE CARE WHEN ASSEMBLING THE UNIT AND ALWAYS SET THE TABLE TOPS ON A CLEAN, SOFT SURFACE.

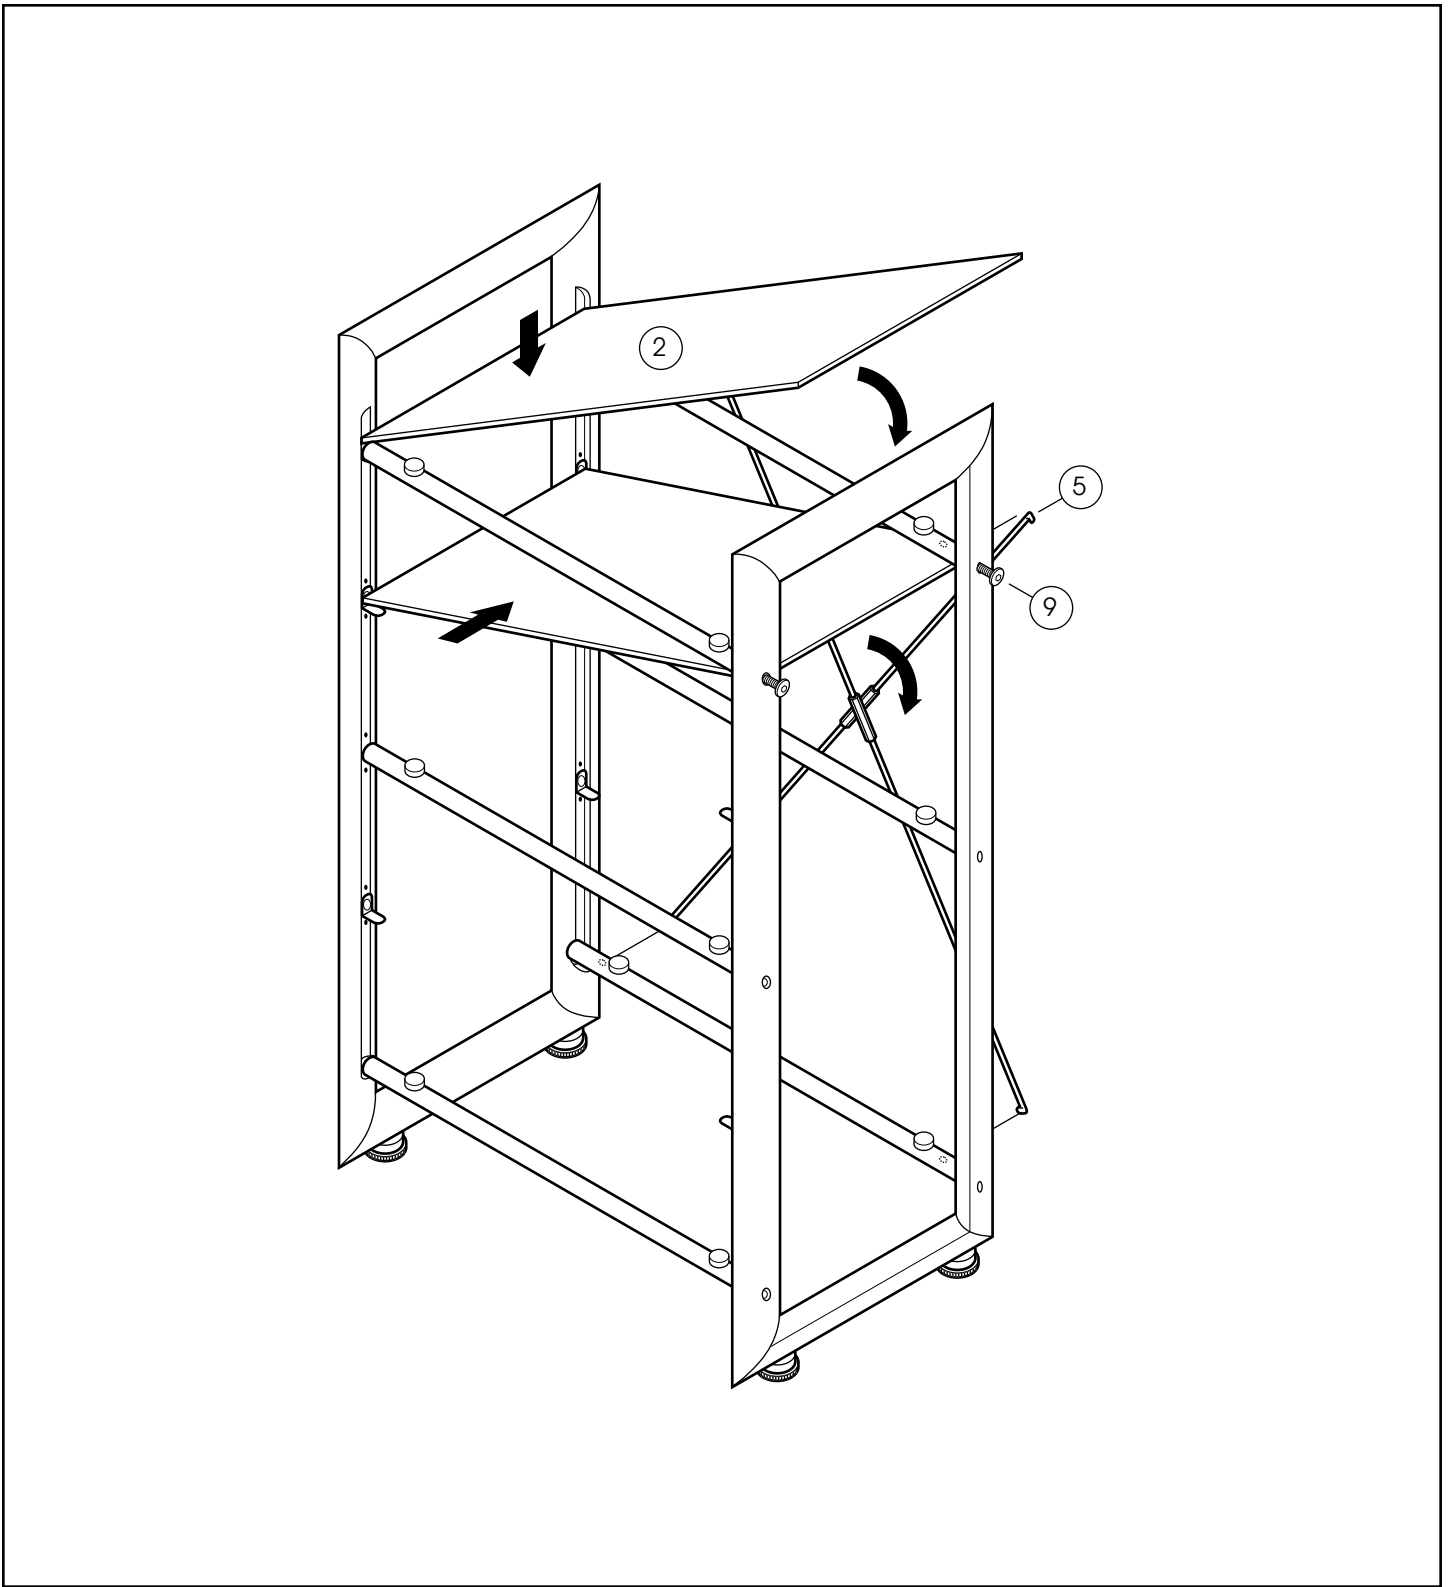
NOTICE:
DO NOT TIGHTEN BOLTS UNTIL
UNIT IS FULLY ASSEMBLED.



- 1.** ATTACH CROSSBARS (3) TO REAR END OF FRAMES (1) USING ALLEN BOLTS (9). ATTACH CROSSBARS (4) TO FRONT OF FRAMES (1) USING ALLEN BOLTS (9).

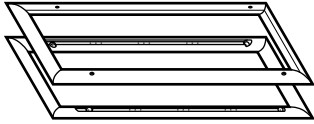

 
 



 
 
 


2. INSERT SPACERS (6) INTO HOLES IN CROSSBARS. INSERT SHELF BRACKETS (7) INTO HOLES IN FRAMES AT DESIRED HEIGHT. SCREW FLOOR LEVELERS (8) INTO BOTTOM OF FRAMES.



3. LOOSEN TOP RIGHT ALLEN BOLTS (9) AND CAREFULLY PLACE GLASS SHELF (2) ONTO SPACERS. TIGHTEN BOLTS. SLIDE REMAINING GLASS SHELVES (2) AT AN ANGLE ONTO SHELF BRACKETS AS SHOWN. ATTACH REAR STABILIZERS (5) TO REAR OF UNIT BY HOOKING ONE END INTO HOLE ON BOTTOM CROSSBAR, THEN ADJUST LENGTH BY TURNING CENTER MECHANISM, HOOK OTHER END TO HOLE IN TOP CROSSBAR AND TURN CENTER MECHANISM AGAIN TO TIGHTEN. TIGHTEN ALL BOLTS.

PARTS LIST

DESCRIPTION	QUANTITY	
1. FRAME - 1 LEFT & 1 RIGHT	2	
2. GLASS SHELF	5	
3. CROSSBAR - 2 HOLES	4	
4. CROSSBAR - 4 HOLES	2	
5. REAR STABILIZER	2	
6. SPACER	12	
7. SHELF BRACKET	8	
8. FLOOR LEVELER	4	
9. ALLEN BOLT - 1/4 X 38MM	12	
10. ALLEN WRENCH	1	

LIMITED WARRANTY

Studio RTA warrants to the Original Purchaser that this product will be free from defects in its material and workmanship as described below. The company will repair or replace, at its option, without charge to the original purchaser only, defective products or parts during the following warranty periods. Ten (10) years or (Thirty (30) days on closeouts and discounted products) while owned by the Original Purchaser... Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. The company will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. The company will advise you of the procedure to follow in making warranty claims. Telephone Studio RTA at 1-800-445-1527 to explain the defect and give your name, address, and telephone number. Please be prepared with the model number of the product, date and place of purchase.